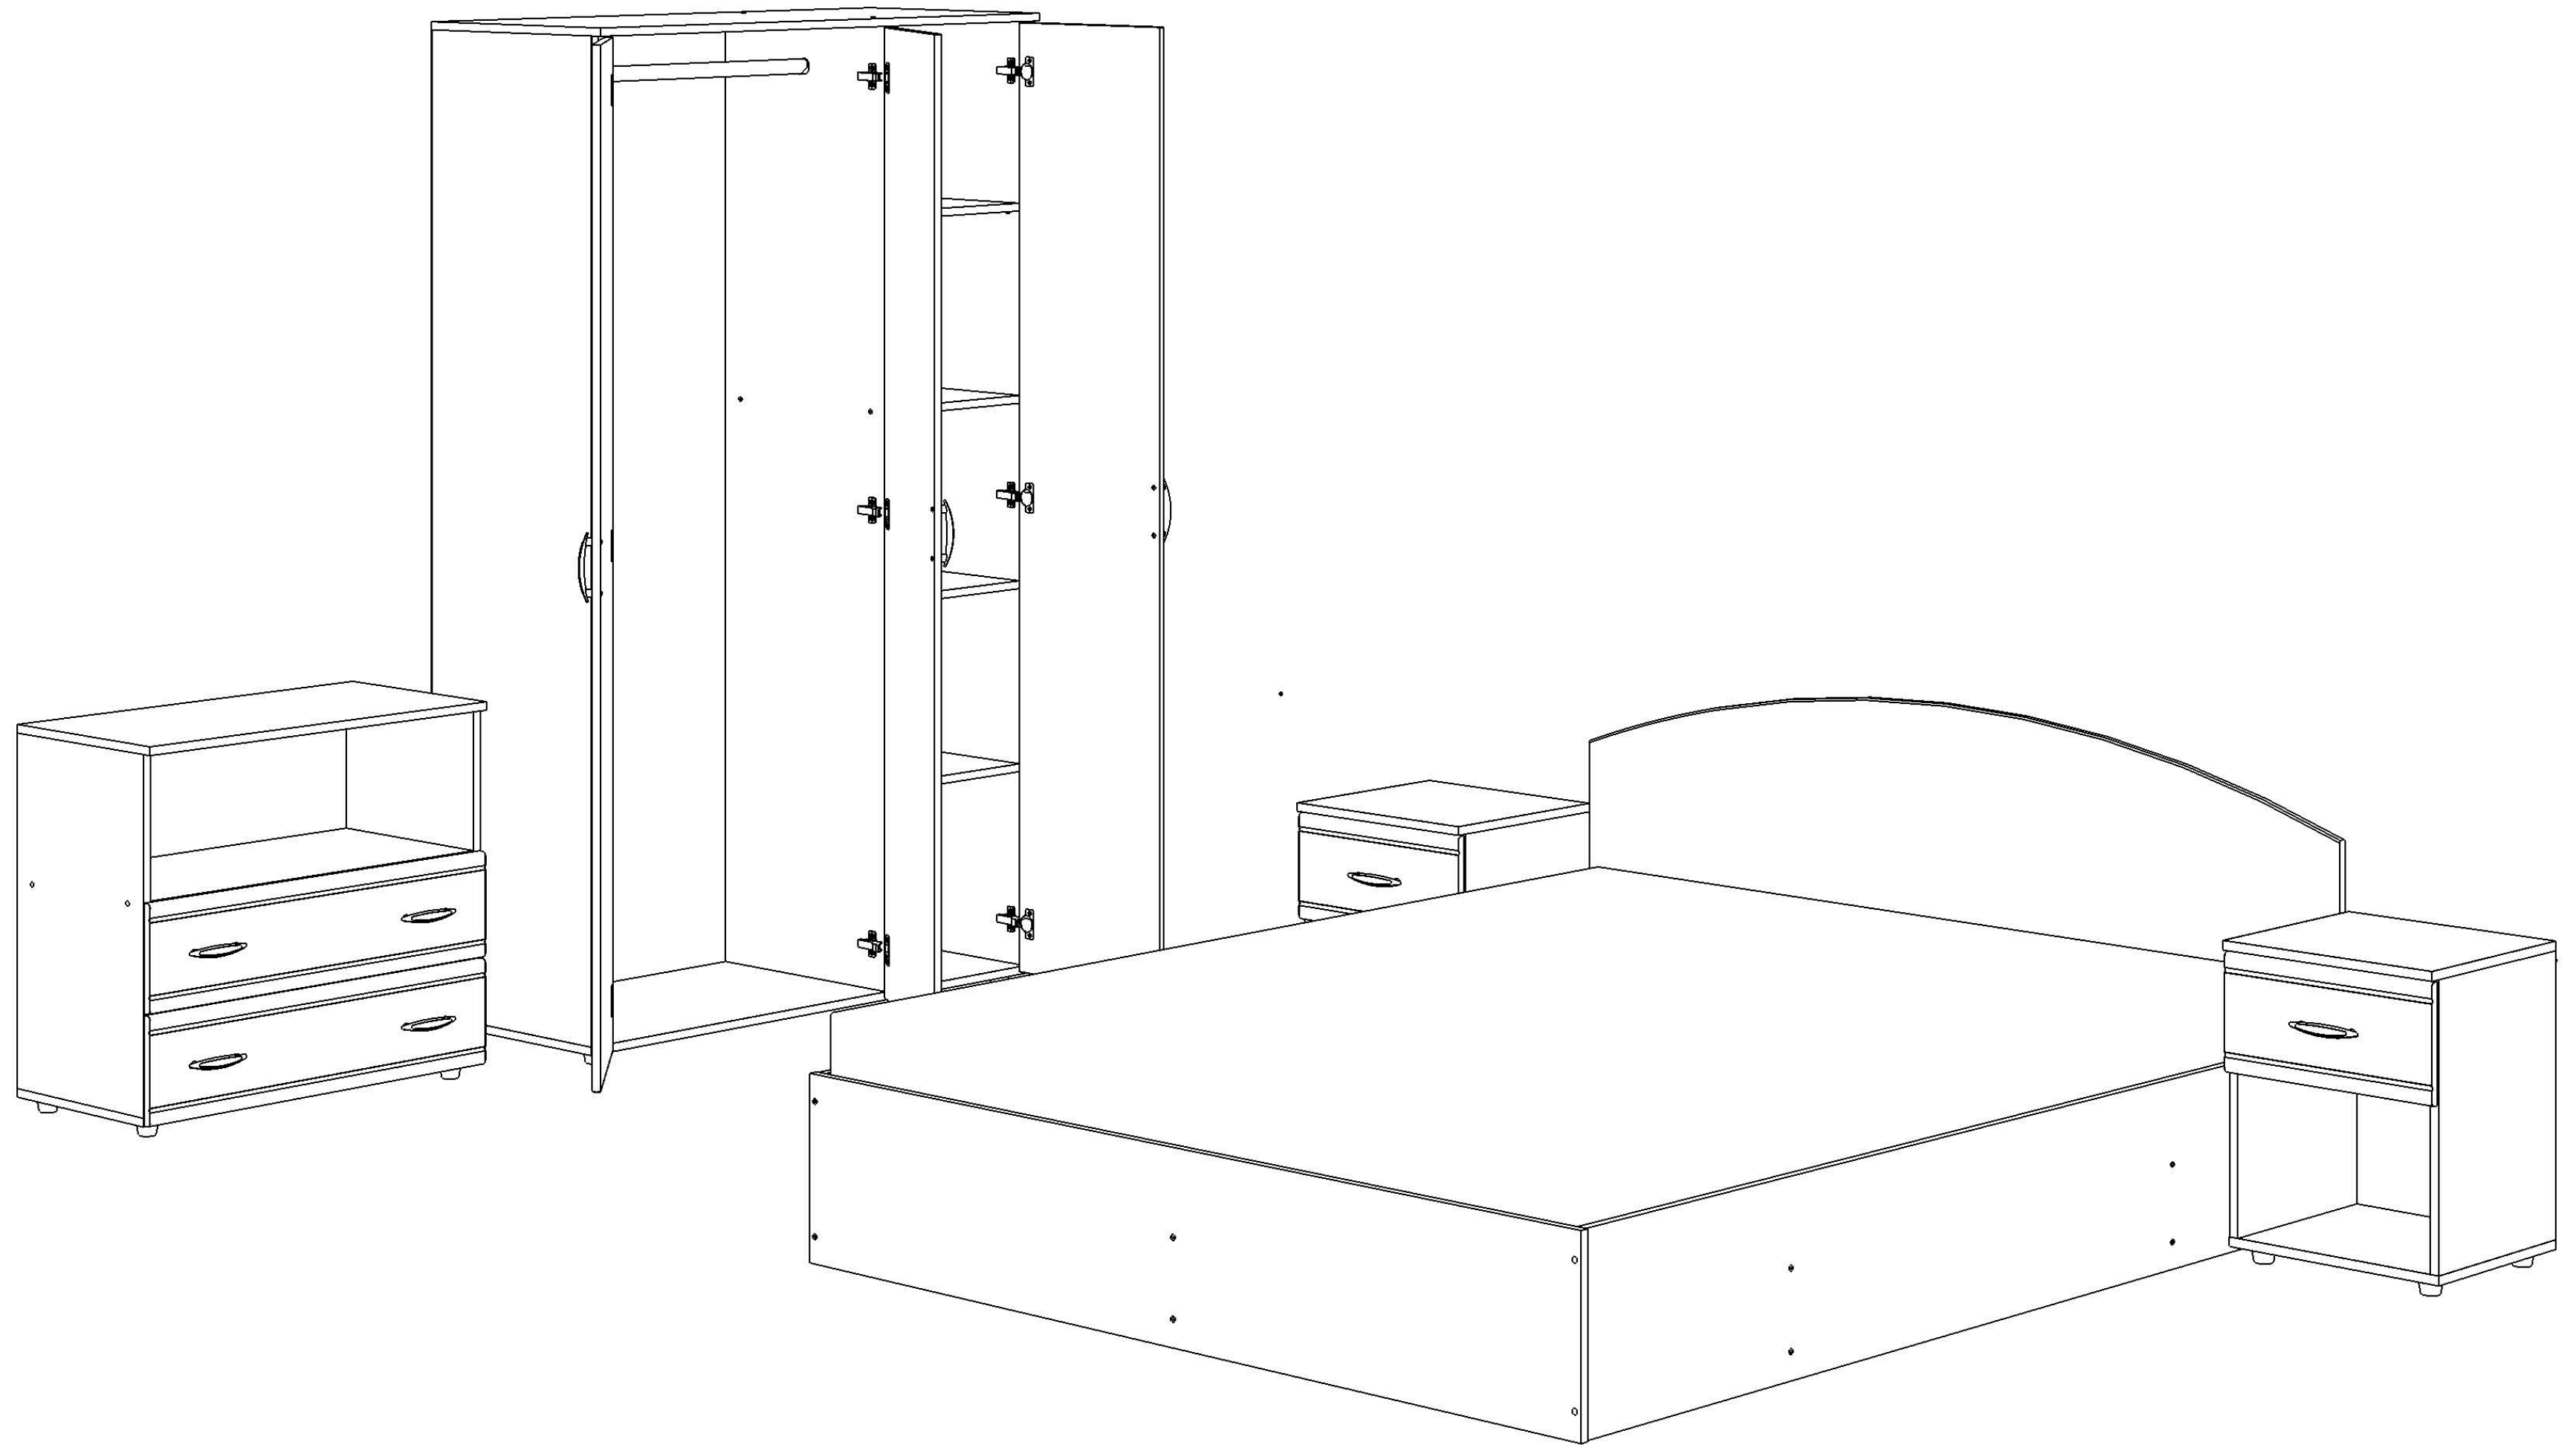


Dormitor FLORIN



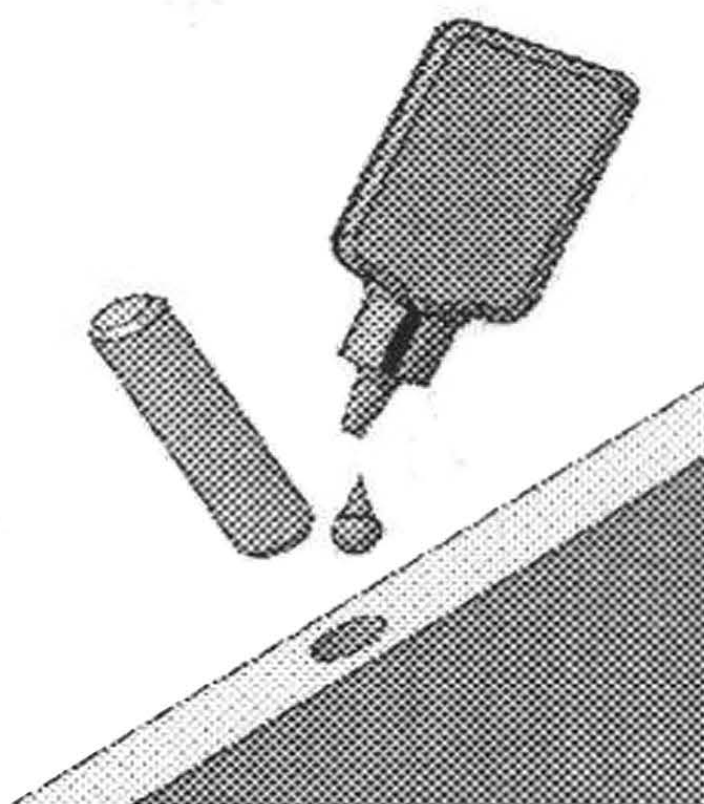


Fig. 1

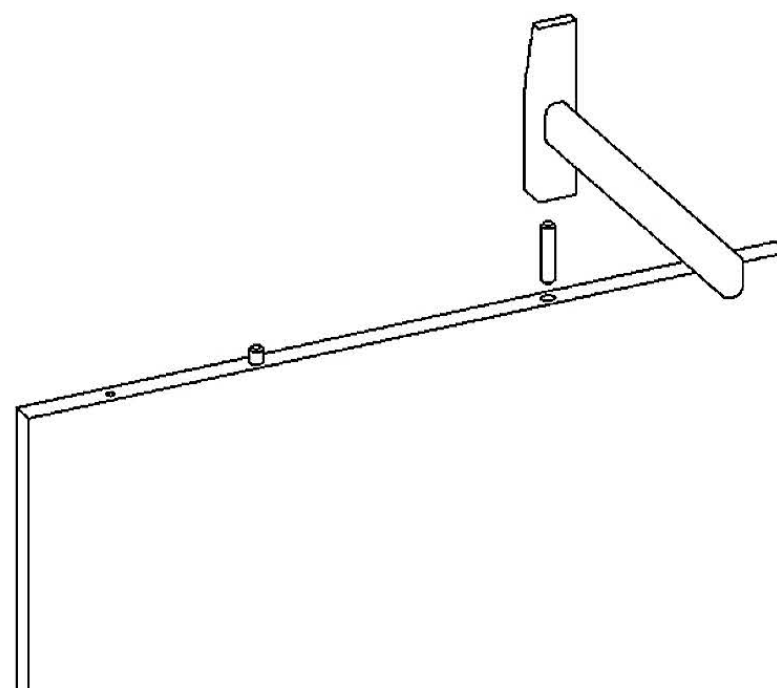


Fig. 2

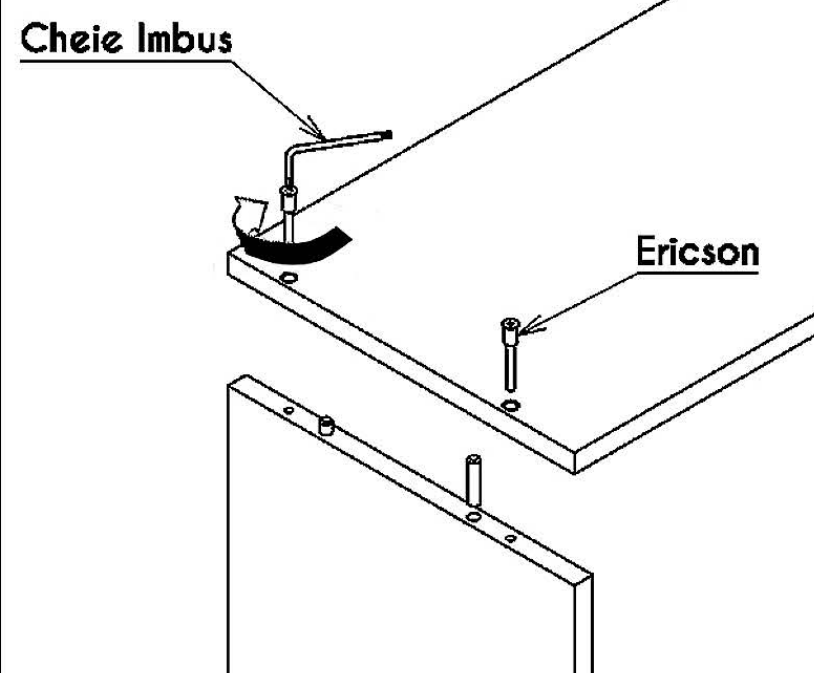


Fig. 3

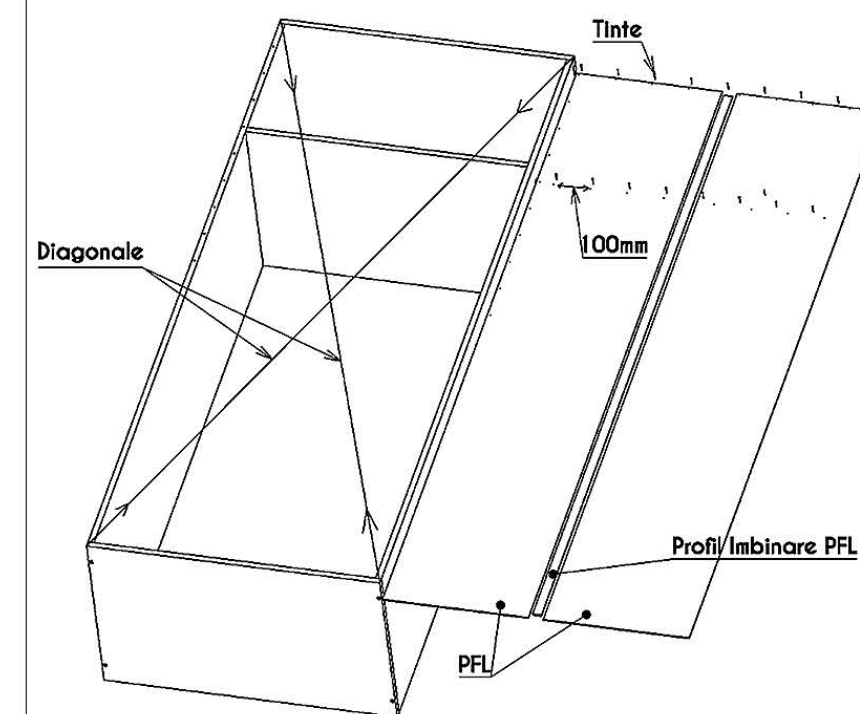


Fig. 4

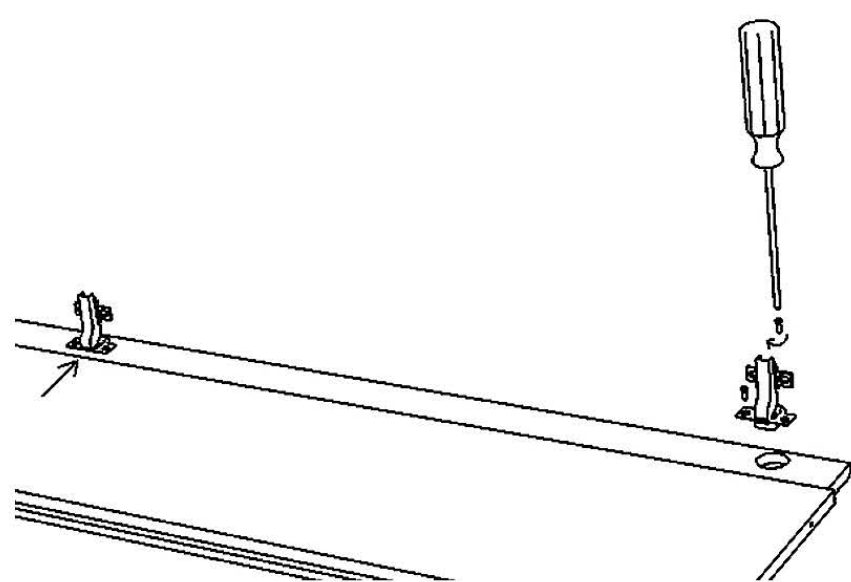


Fig. 5

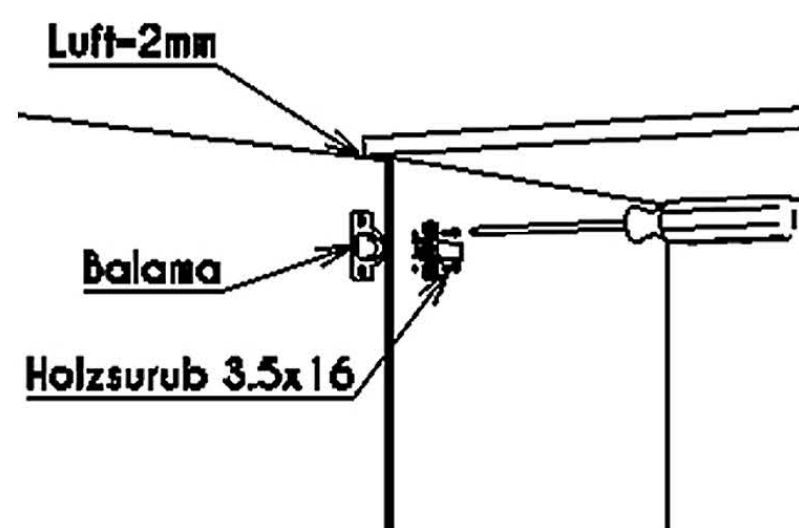


Fig. 6

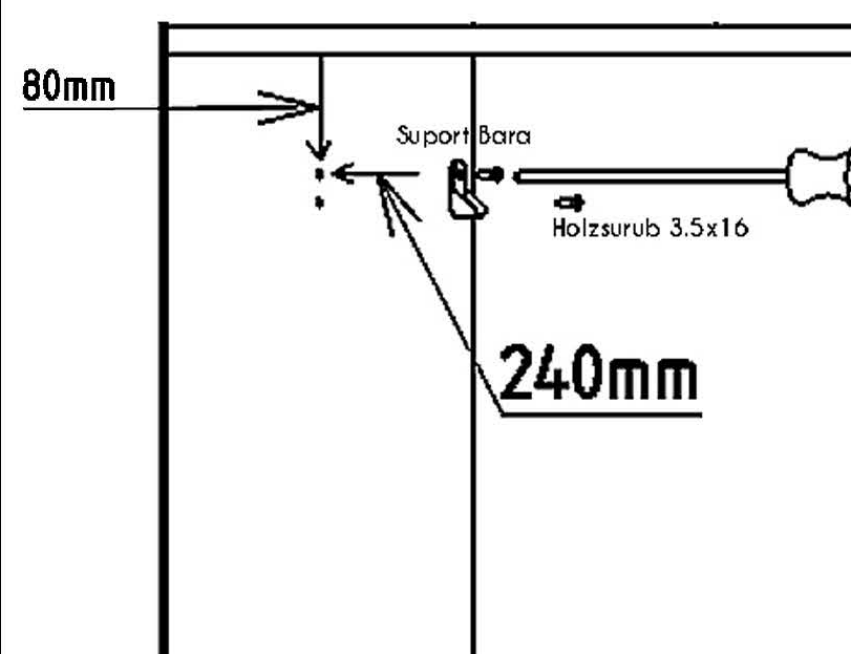


Fig. 7





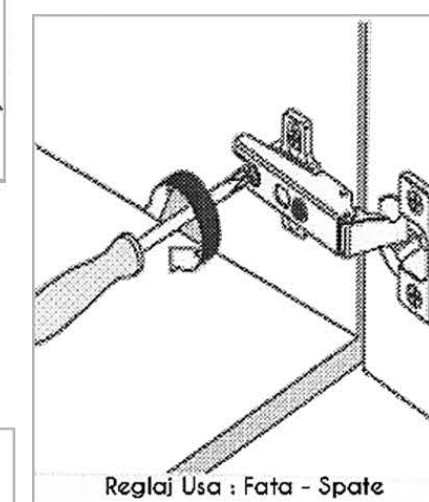


Fig. 8



Dormitor FLORIN - Schita montaj DULAP

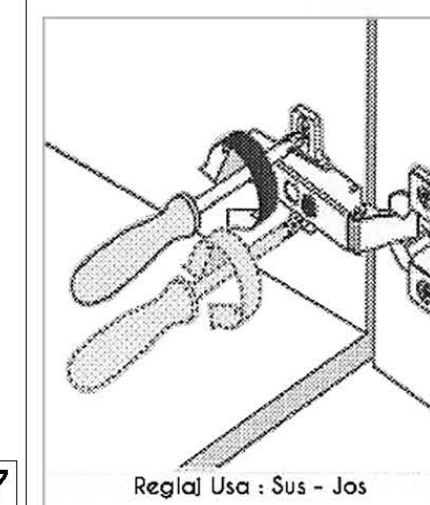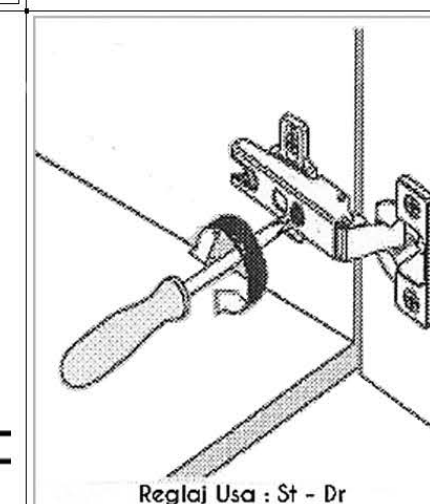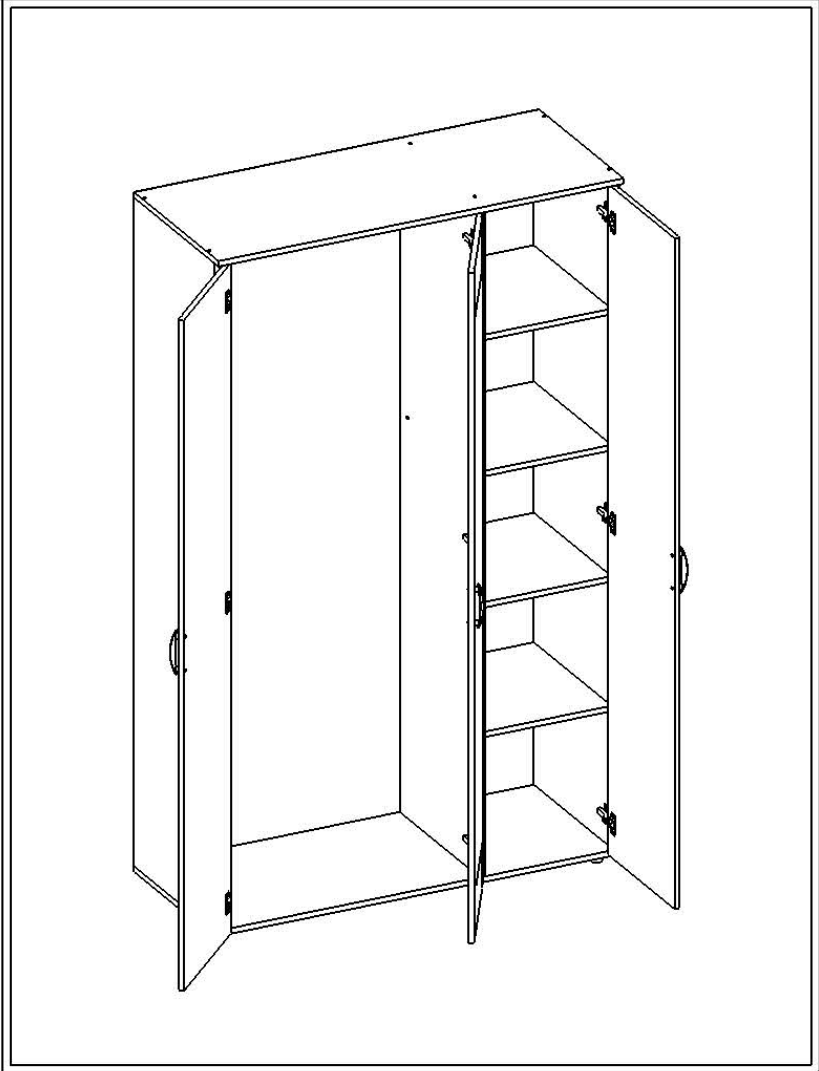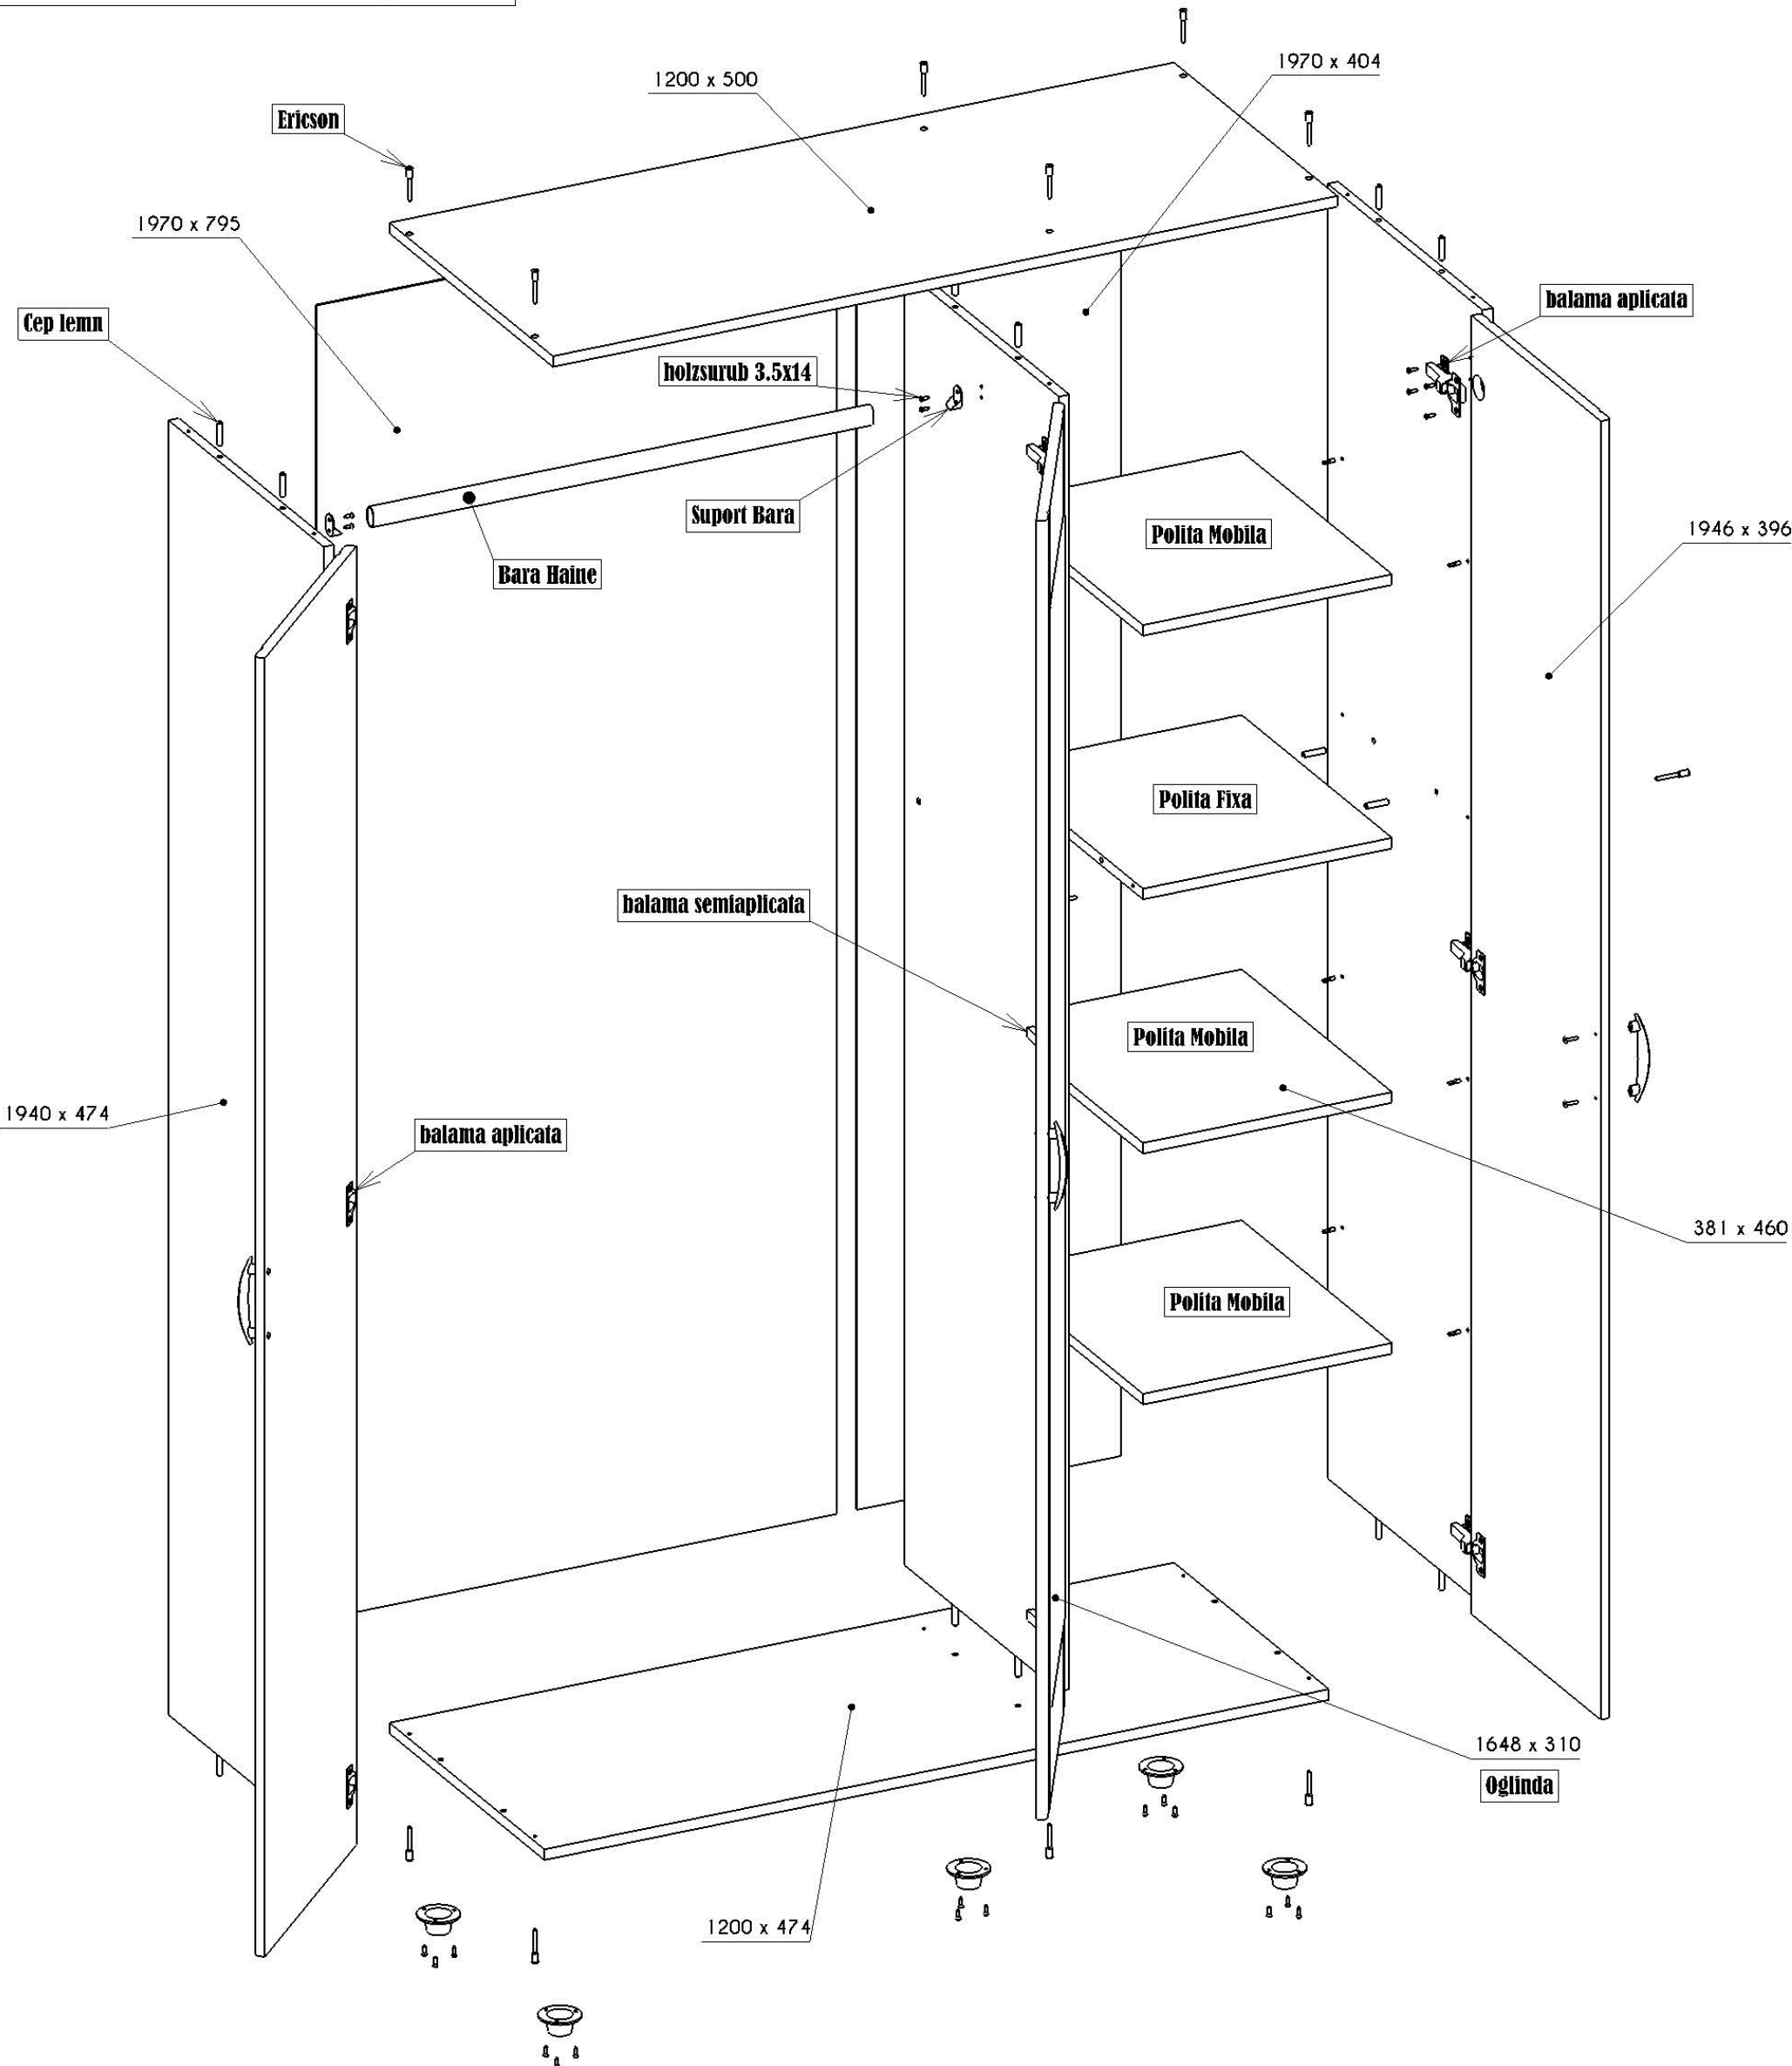

Dormitor FLORIN - Schita montaj COMODA

Detalii Montaj :

1. se bat cepurile de lemn in peretii laterali.
ATENTIE !!! In partea de sus se pune aracet in gauri inainte .
2. se prind glisierile de peretii laterali (ca in schita , pe semne) , cu rola spre partea cantuita.
Se vor folosi holzsuruburi 3.5x15.
3. Se aseaza peretele lateral din stanga, cu partea cantuita in jos, si se prinde polita cu ericsoare (se va folosi cheia imbus)
4. Se prinde peretele lateral din dreapta, se prinde capacul de jos
5. Se pune aracet in gaurile din capac si se va fixa de pereti. Se asteapta 5 min. pana se intareste aracetul
6. Se aseaza comoda cu fata in jos (se pun adaos sub pereti , lateralele de la sertar), se masoara cele 2 diagonale si se impinge in colturi pana sunt egale. Se pune PFL-ul si se bate in tinte (distanta intre tinte de 100 mm)
7. Se vor monta sertarele. Se monteaza cutia (ATENTIE - se pun placile 711x100 1 cu gauri una fara , la fiecare cutie) , se masoara diagonalele, se bate PFL-ul in tinte. Se prinde glisiera ca in schita (cu rola spre spate), se prinde fata de sertar cu manerele.
8. Se aseaza sertarul in comoda, se regreaza luftul. Se trage afara sertarul si se va fixa Fata de cutie, cu 2 holzsuruburi 3.5x25.

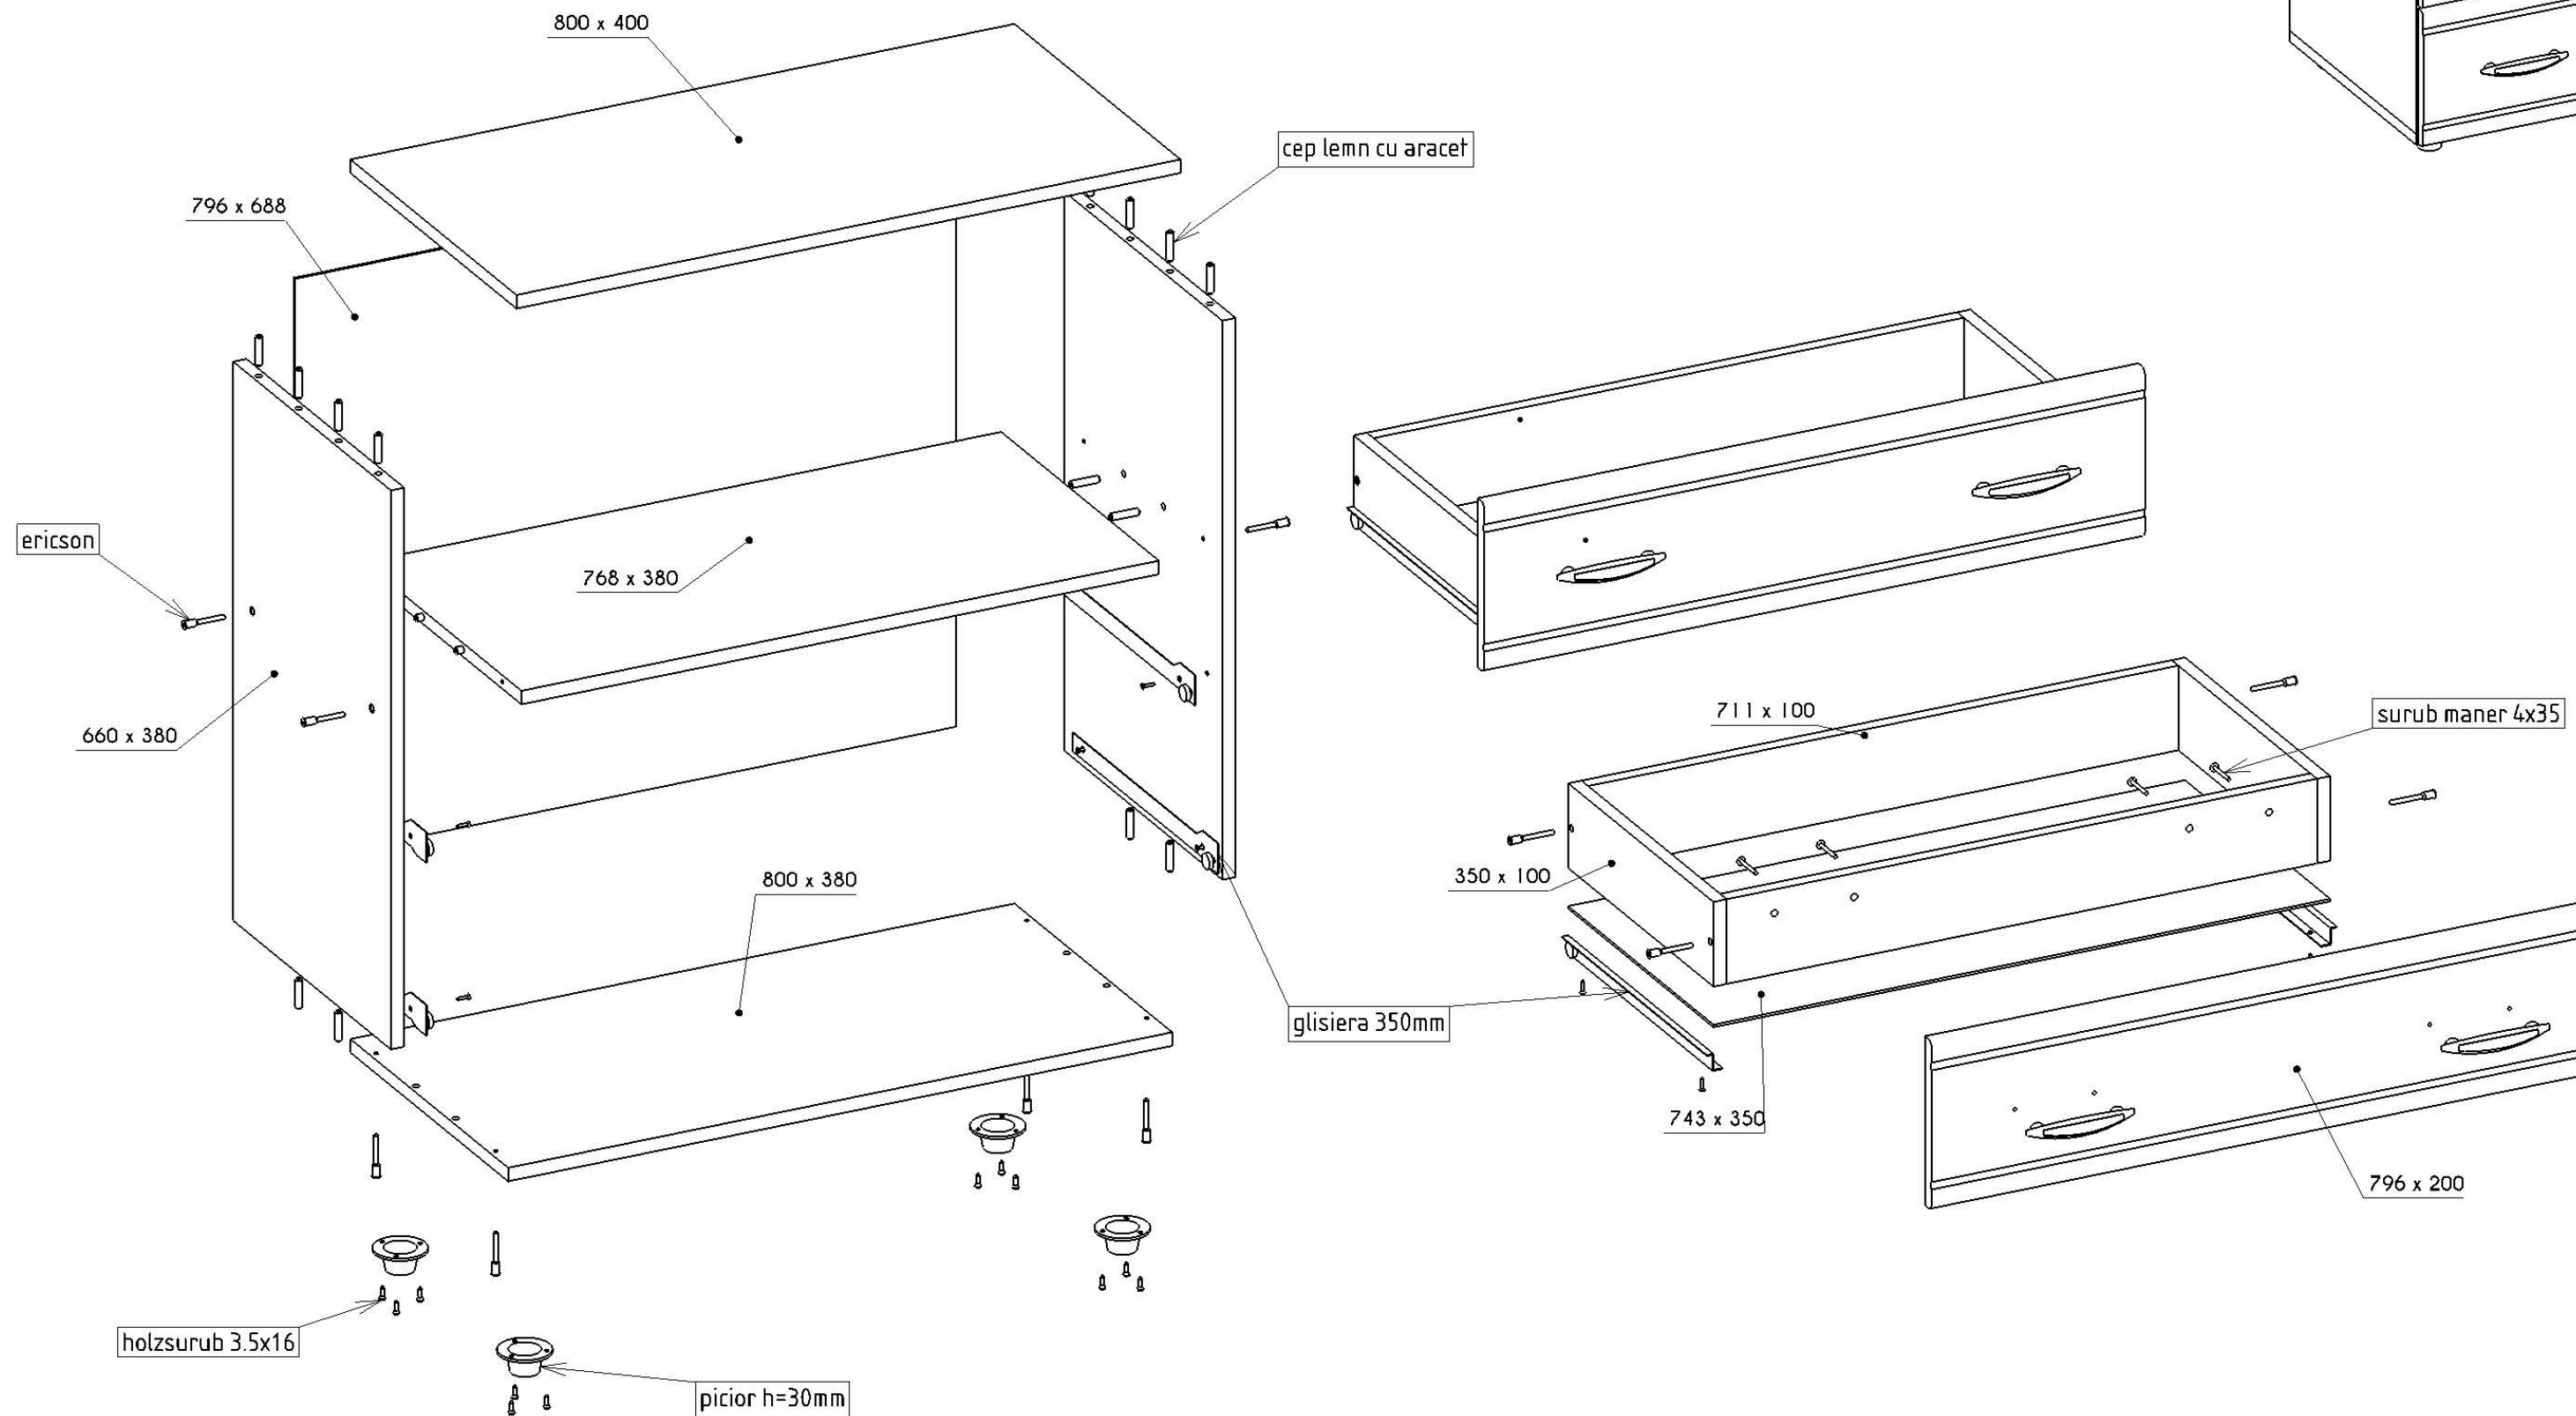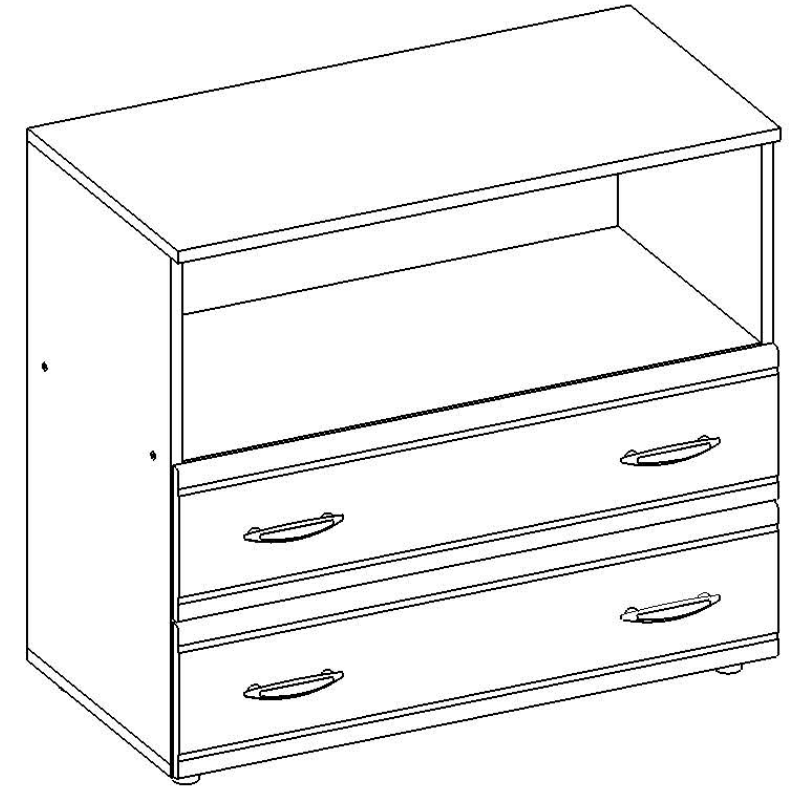

Dormitor FLORIN - Schita montaj PAT + NOPTIERE

