



Schita montaj : Dulap 70 - 4U + 1S

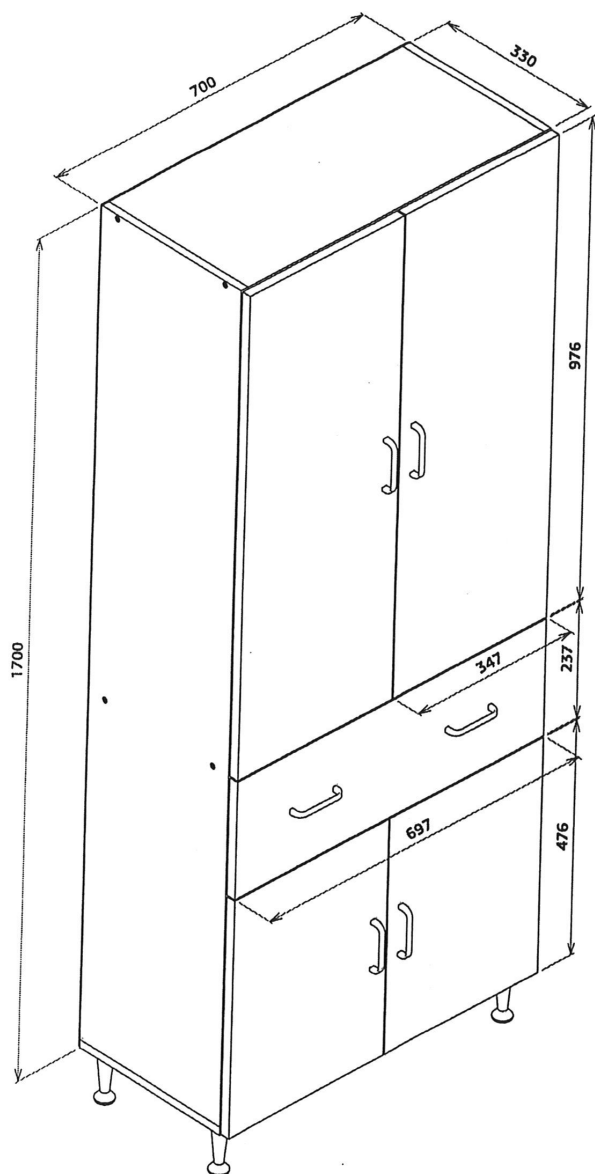


REPER	LUNGIME	LATIME	NB.
. PFL Sertar	643	300	1
. PFL Spate	976	348	2
. PFL Spate	721	348	2
Adaos sertar	611	138	2
Fata sertar	237	697	1
Laterală sertar	300	138	2
Perete lateral	1684	330	2
Polita fixa	668	330	2
Polita mobila	668	320	2
Soclu	700	330	1
Usa	976	347	2
Usa	476	347	2


ACCESORII	NB.
x - Balama aplicata	10
x - Cheie imbus	1
x - Giltiera bila 300mm	1
x - Holzsurub 3.5x16	64
x - Holzsurub 3.5x25	2
x - Maner 96mm	6
x - Picior H100	4
x - Profil imbinare PFL L=698mm	1
x - Profil imbinare PFL L=954mm	1
x - Suport polita (diblu zinc)	8
x - Surub confirmare (ericson 7x50)	20
x - Surub maner M4x20	8
x - Surub maner M4x35	4
x - Tinte	66


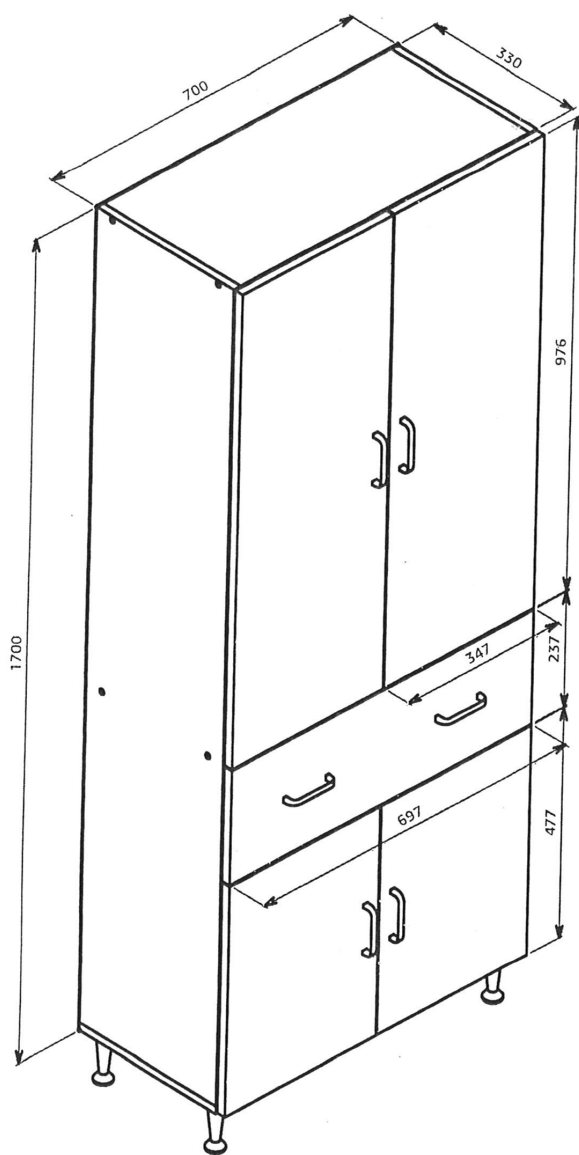





REPER	LUNGIME	LATIME	NB.
. PFL Sertar	643	300	1
. PFL Spate	976	348	2
. PFL Spate	721	348	2
Adaos sertar	611	138	2
Fata sertar	237	697	1
Laterală sertar	300	138	2
Perete lateral	1684	330	2
Polita fixa	668	330	2
Polita mobila	668	320	2
Soclu	700	330	1
Usa	976	347	2
Usa	477	347	2

ACCESORII	NB.
x - Balama aplicata	10
x - Cheie imbus	1
x - Glisiera bila 300mm	1
x - Holzsurub 3.5x16	64
x - Holzsurub 3.5x25	2
x - Maner 96mm	6
x - Picior H100	4
x - Profil imbinare PFL L=698mm	1
x - Profil imbinare PFL L=954mm	1
x - Suport polita (diblu zinc)	8
x - Surub confirmare (ericson 7x50)	20
x - Surub maner M4x20	8
x - Surub maner M4x35	4
x - Tinte	66

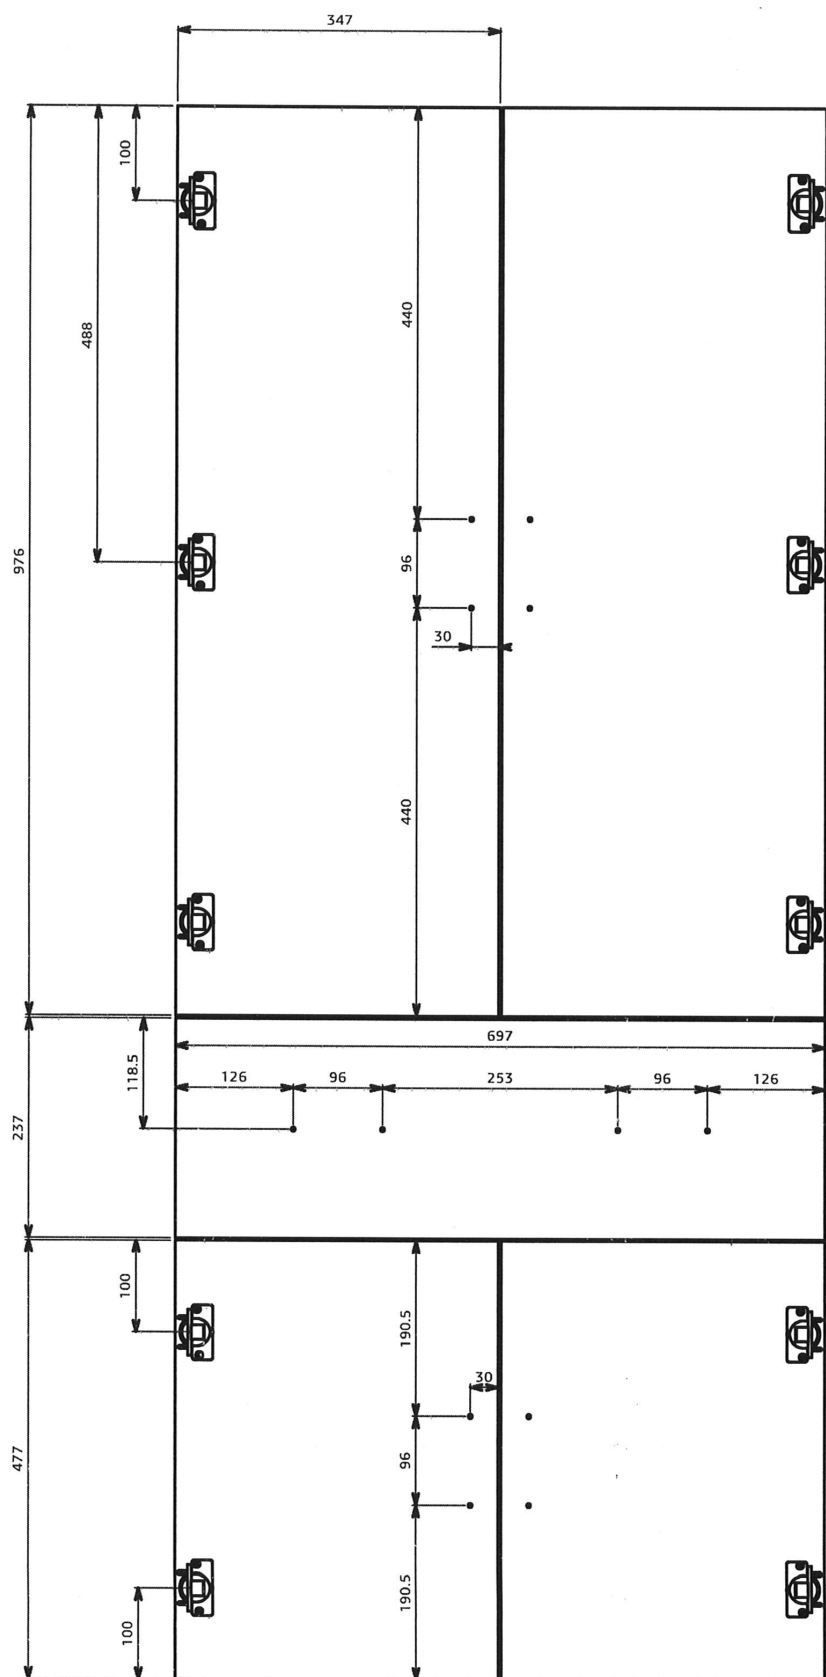

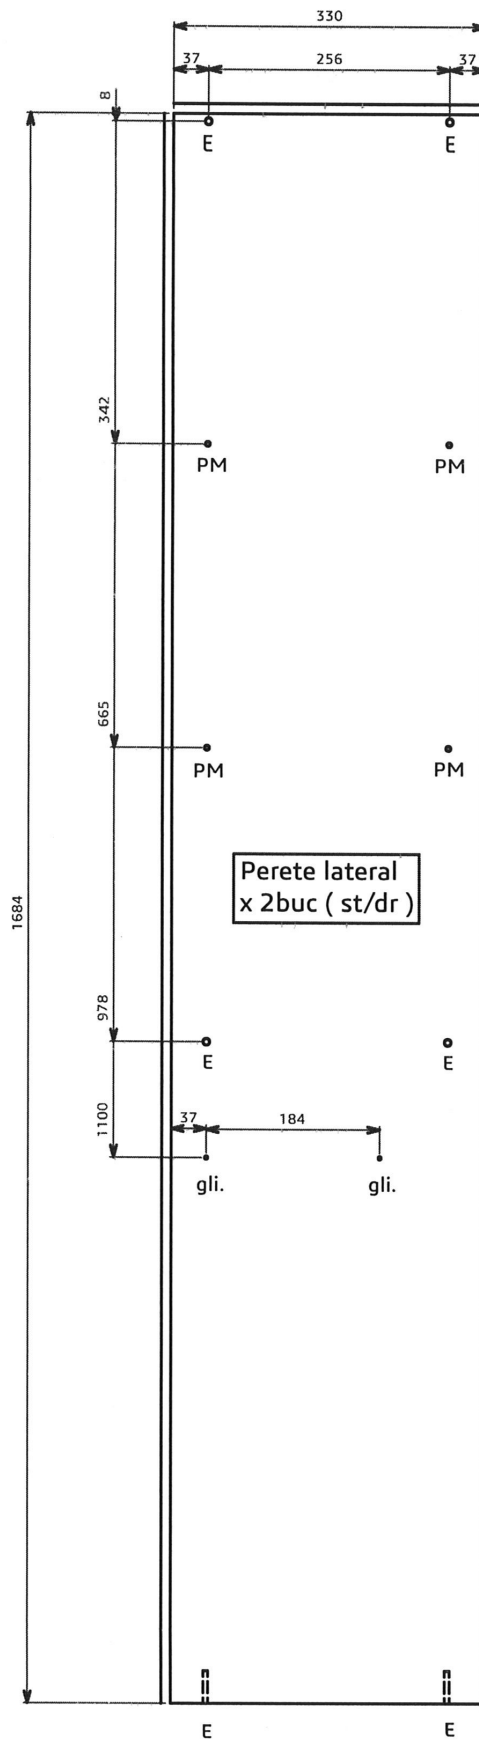

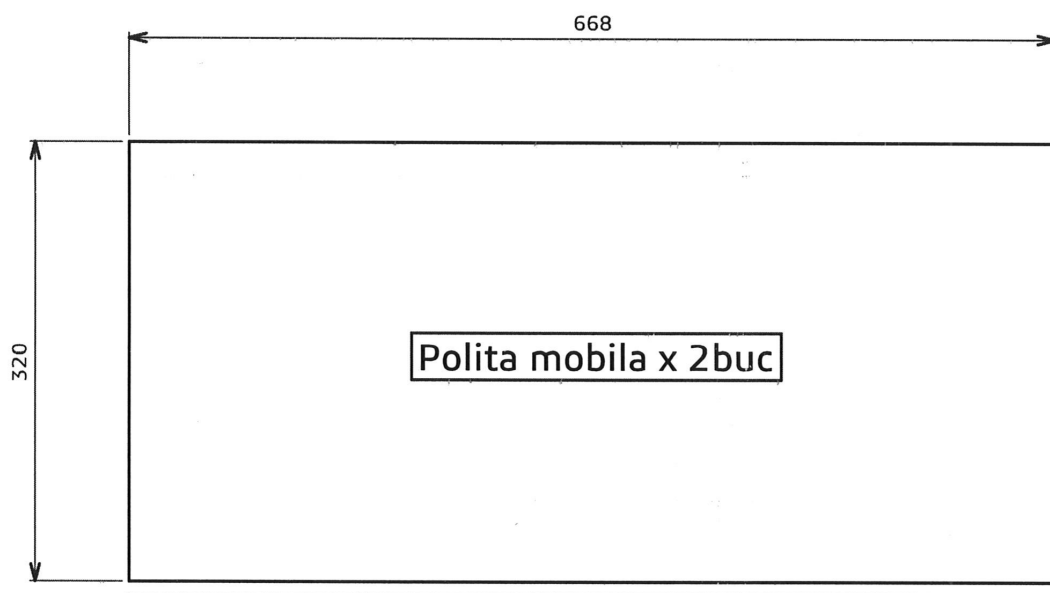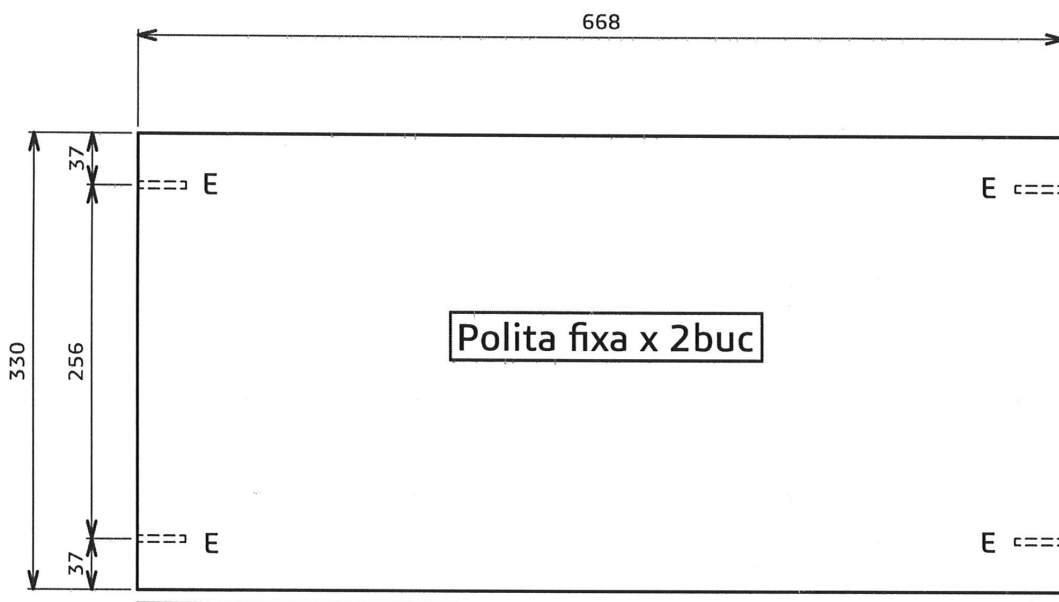

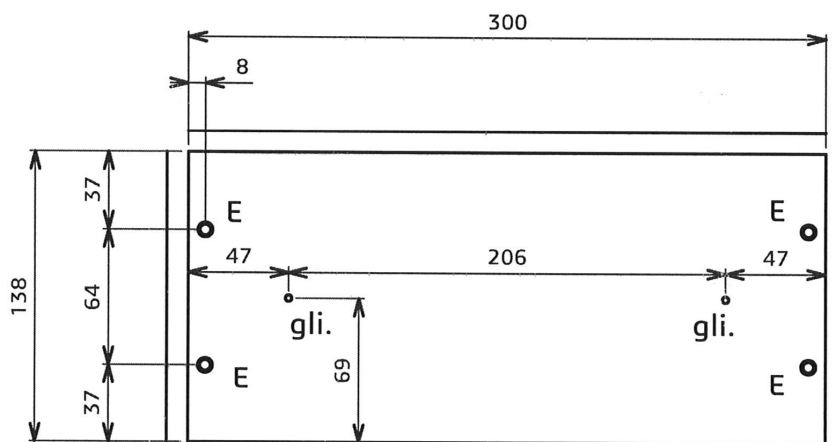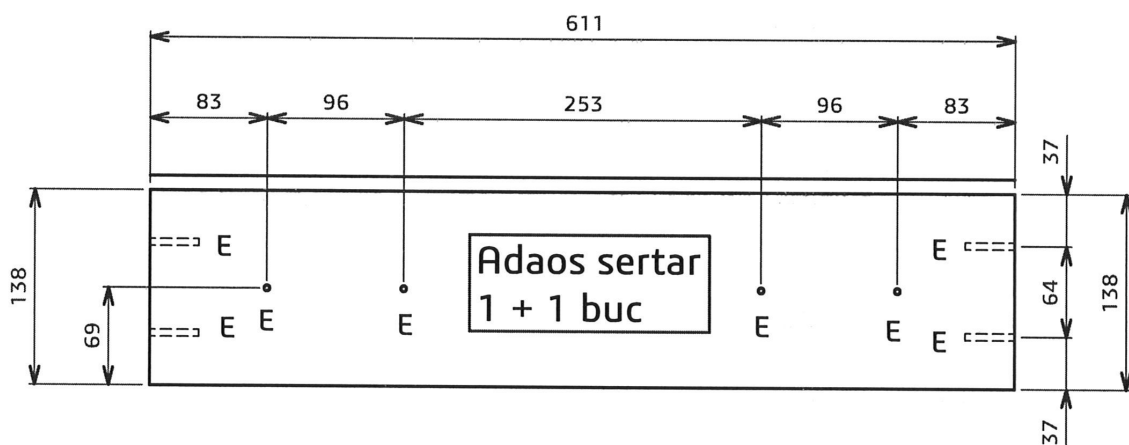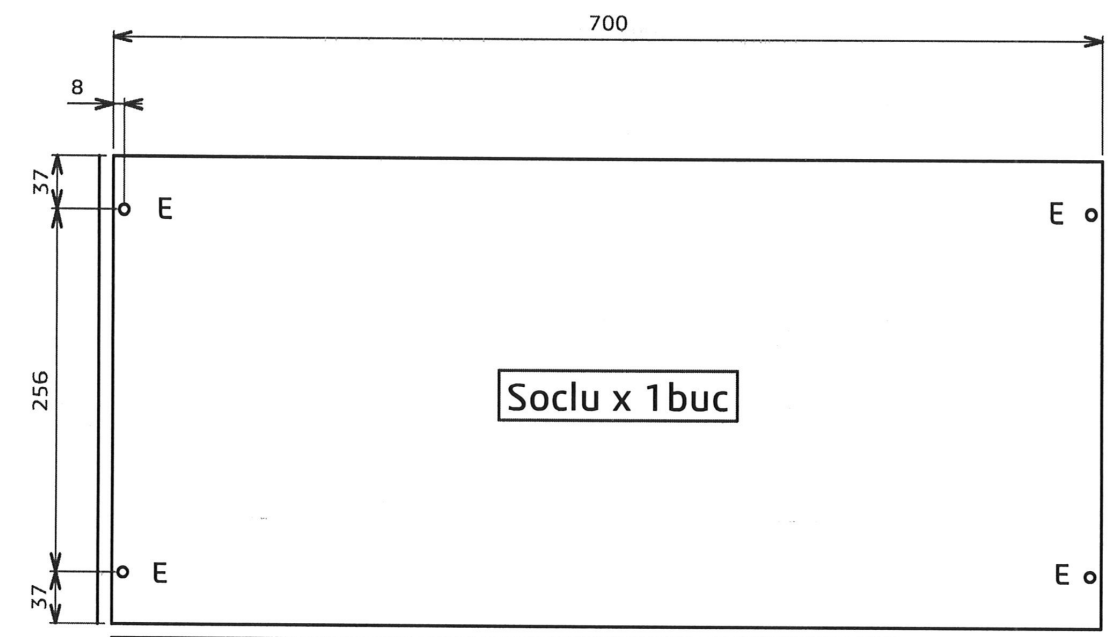

Laterala sertar x 2buc