



Soldat 35 : 1U + 3S

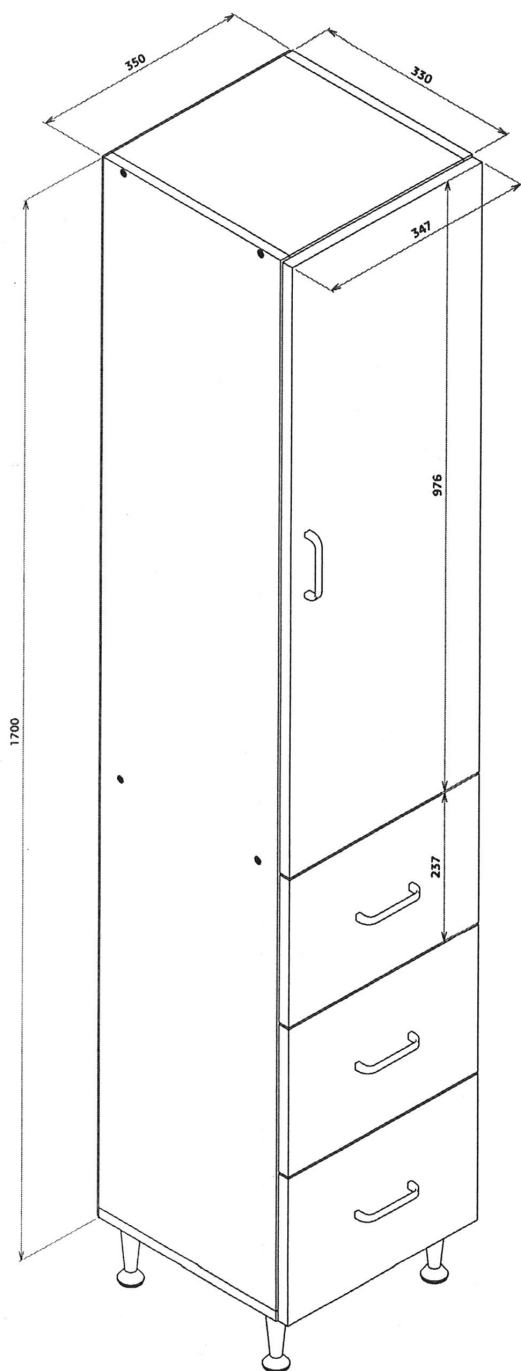


REPER	LUNGIME	LATIME	NB.
.PFL Sertar	293	300	3
.PFL Spate	976	348	1
.PFL Spate	721	348	1
Adaos sertar	261	138	6
Fata sertar	237	347	3
Laterală sertar	300	138	6
Perete lateral	1684	330	2
Polita fixa	318	330	2
Polita mobila	318	320	2
Soclu	350	330	1
Usa	976	347	1


ACCESORII	NB.
x - Balama Aplicata	3
x - Cheie imbus	1
x - Glisiera bila 300mm	3
x - Holzsurub 3.5x16	52
x - Holzsurub 3.5x25	6
x - Maner 96mm	4
x - Picior H100	4
x - Suport polita (diblu zinc)	8
x - Surub confirmare (ericson 7x50)	36
x - Surub maner M4x20	2
x - Surub maner M4x35	6
x - Tinte	65



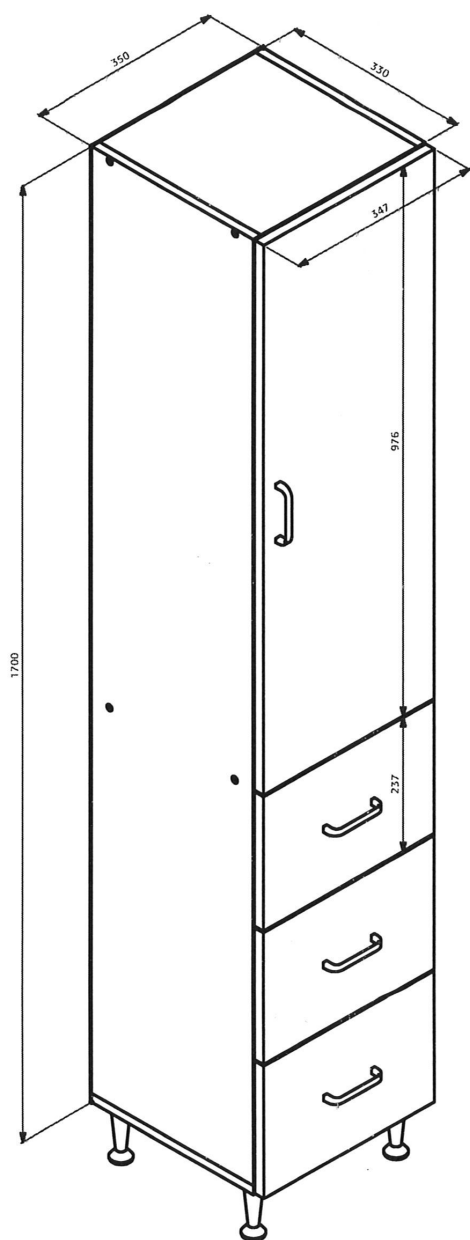



REPER	LUNGIME	LATIME	NB.
.PFL Sertar	293	300	3
.PFL Spate	976	348	1
.PFL Spate	721	348	1
Adaos sertar	261	138	6
Fata sertar	237	347	3
Laterală sertar	300	138	6
Perete lateral	1684	330	2
Polita fixa	318	330	2
Polita mobila	318	320	2
Soclu	350	330	1
Usa	976	347	1

ACCESORII	NB.
x - Balama Aplicata	3
x - Cheie imbus	1
x - Glisiera bila 300mm	3
x - Holzsurub 3.5x16	52
x - Holzsurub 3.5x25	6
x - Maner 96mm	4
x - Picior H100	4
x - Suport polita (diblu zinc)	8
x - Surub confirmare (ericson 7x50)	36
x - Surub maner M4x20	2
x - Surub maner M4x35	6
x - Tinte	65

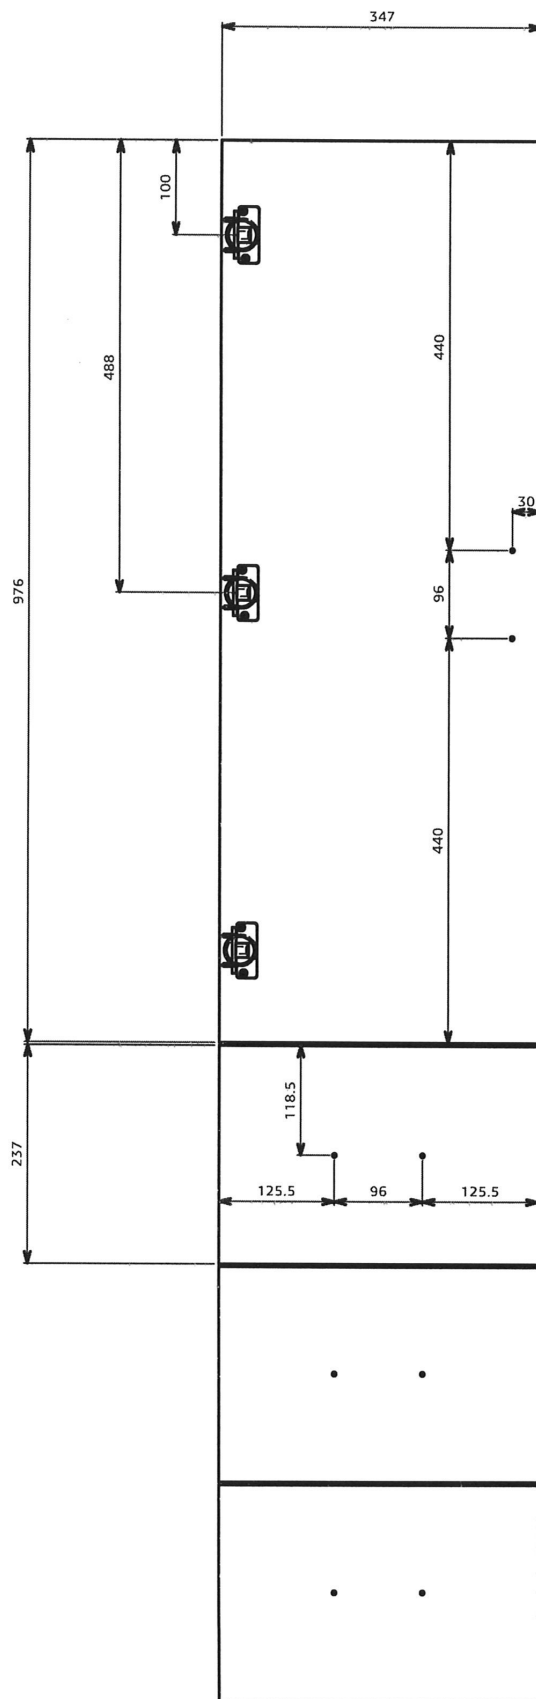


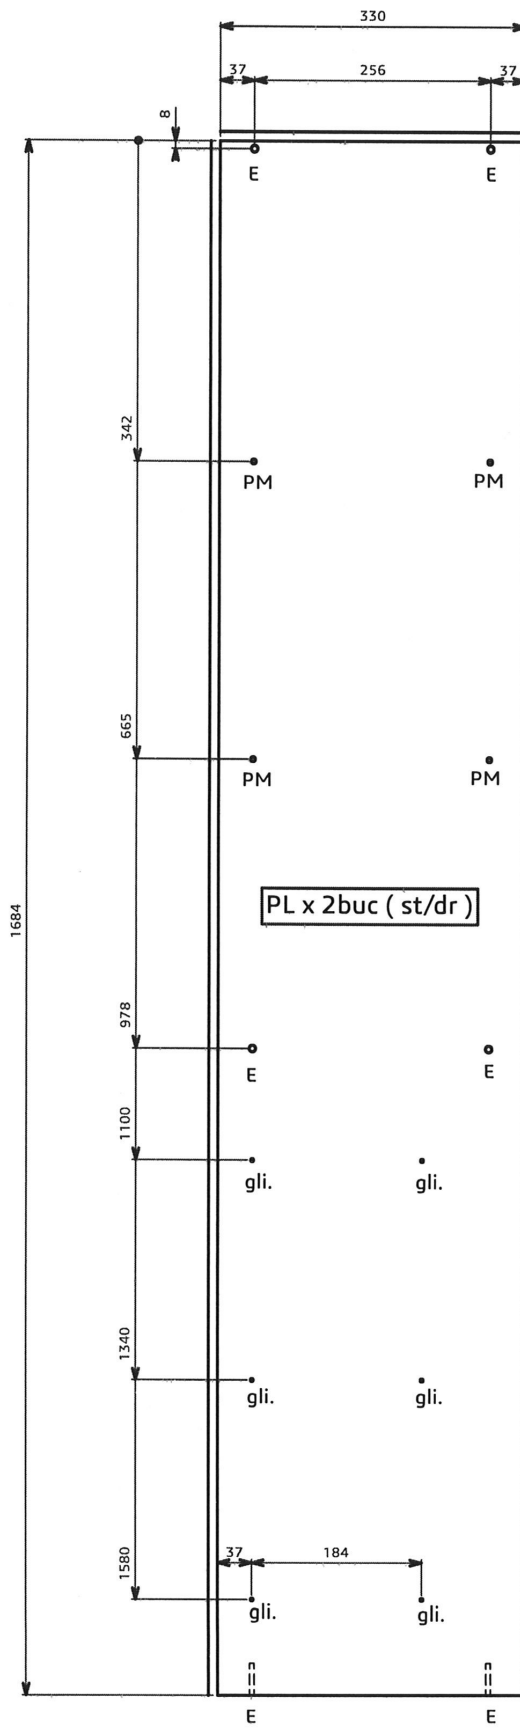

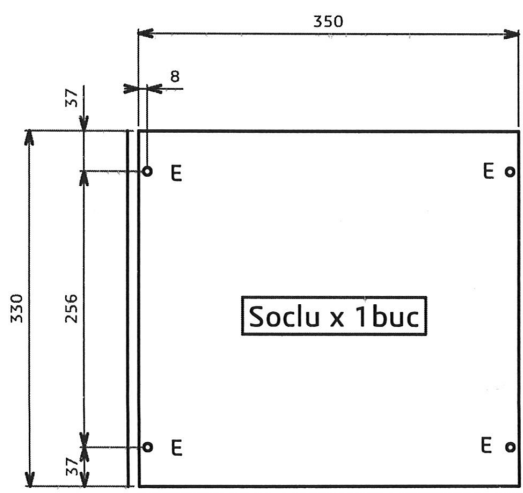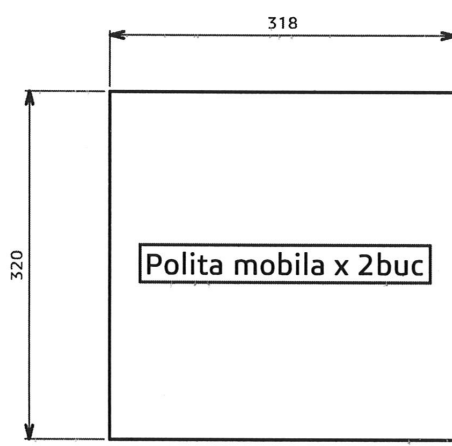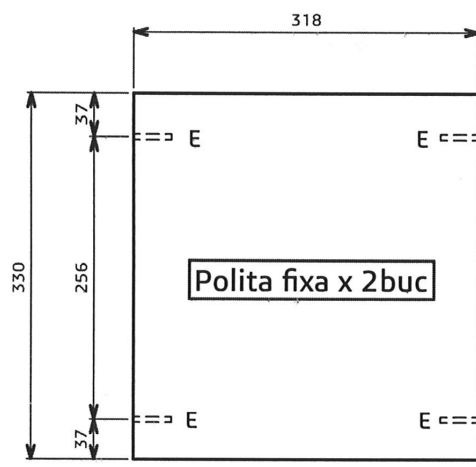

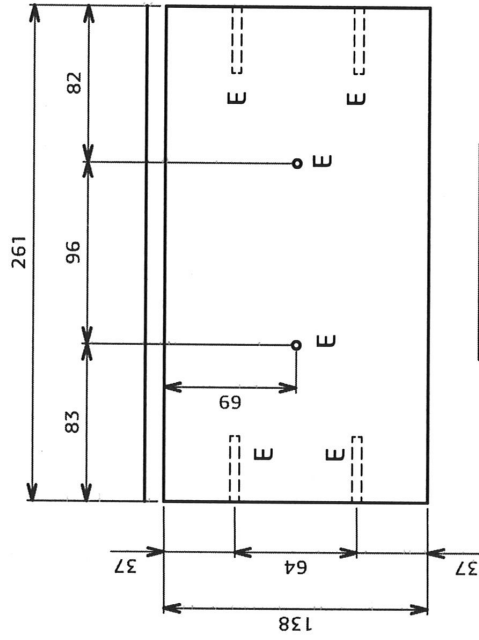

Adaos sertar
3 + 3buc

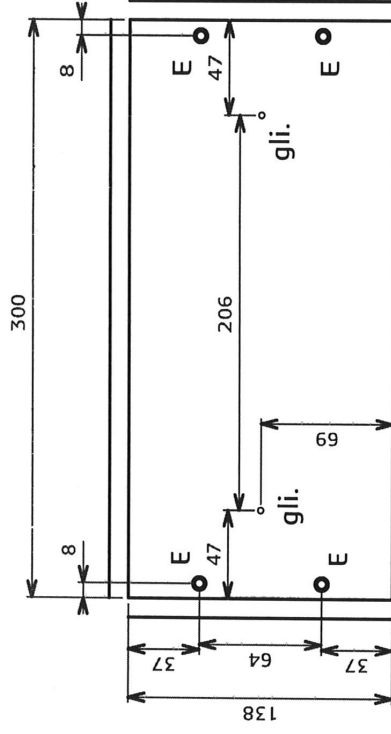

Lateralala sertar x 6buc